

## Thank you for choosing Applied Bolting

**Squirter** DTIs

DuraSquirt<sub>®</sub> DTIs


# Questions about Installation or Inspection? Call us at (802) 460-3100


#### Pro Tips (read first)

- Store all hardware to prevent corrosion, reducing the effort needed to tension the bolts.
- Lubricate both the bolt threads and washer face of nuts to reduce friction and improve the installation.
- Use a tool with enough power, hardware testing can check this.
- Hole detail in the steelwork is critical for proper assembly.
- Videos, tips and specific instructions are available at appliedbolting.com.


#### Step 1 Assemble

## **Quick Start Guide**

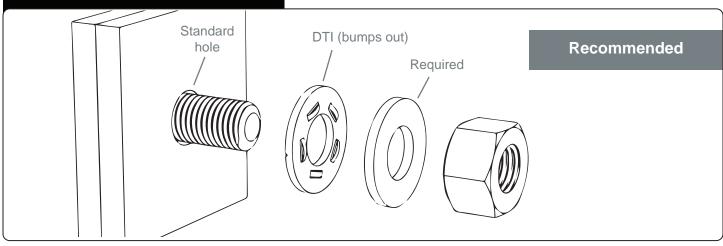

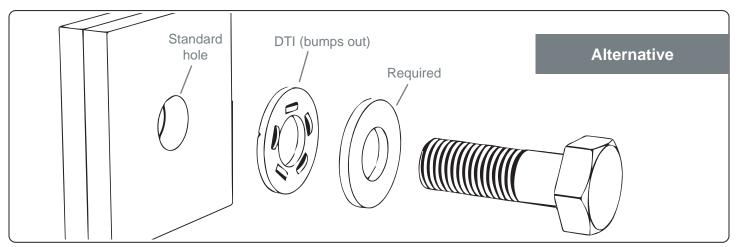

### Step 2 Tighten / Inspect

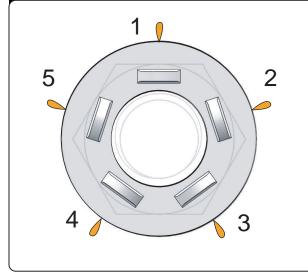

When orange is visible from all bumps, installation and inspection is complete.

#### Question?

Our team is ready to assist

(802) 460-3100

Or

info@appliedbolting.com

Videos and Tips



Scan for support